



User instructions

Your MoveMaster

Congratulations on purchasing an original MoveMaster!
The MoveMaster offers a completely new sense of freedom in the operation of your Computer.

By the possibility of controlling the grip only by the use of the wrist, all five fingers remain free for the parallel operation of the 10 primary and secondary keys. Due to the extremely short switching paths of the handle, movement processes are more precise and faster. In addition, the MoveMaster also offers various adjustment options to meet the ergonomics of your hand.
Optionally available for right-handed (mouse right / MM left)
or left-handed (mouse left / MM right).

Although designed primarily for the ultimate gaming experience, it also provides a complement to common control in many other applications.

Not suitable for children under 12!



Table positioning

After months of testing, we recommend the following positioning of your MoveMaster for optimal and fatigue-free use.

While your hand covers the grip loosely (depending on preference with your fingers or the palm of your hand), your forearm should rest up to the level of the elbow in the same plane as the MoveMaster. This relieves the strain on your wrist and allows you to enjoy the benefits of the MoveMaster. Make sure you have a comfortable table surface.

The pictures shows the positioning for right-handed people



Handle control

The primary control function of your MoveMaster is the revolutionary handle in combination with the new technical movement unit.

It works with an extremely fine tuned mechanic in the 10th millimeter range. However, this sensitivity requires a certain acclimatization time. The switches in the four main directions of movement are preset by default with the usual WASD.

Attention! Please never try a rotating movement with the handle!



Height adjustment handle

The handle can be adjusted up to 8 mm in height.

To increase, use the allen key (3 mm) to turn the central screw in the handle counterclockwise until it reaches its desired position. At the maximum possible height you feel a skip of the screw.

To lower, turn clockwise and gently push down on the handle from above



Height adjustment secondary keys

The front secondary keys can be individually adjusted in height up to 10 mm.

To do so, loosen the fixing screw of the selected secondary key with the enclosed allen key (3 mm) by a maximum of two turns and position it by carefully moving it to the desired height.

Then tighten the fixing screw again. This allows you to set all front secondary keys individually.



Adjustment thumb secondary button

The thumb secondary button can be individually adjusted in height, depth and inclination.

Loosen the fixing screw of the thumb secondary key with the enclosed allen key (3 mm) by a maximum of two turns and adjust it by carefully moving it into the desired position.

Then tighten the fixing screw again



Handle cover and spacer

With the help of the enclosed spacer you can increase the distance between the primary buttons and the handle top.

Loosen the two fixing screws with the help of the enclosed allen key (2.5 mm) and remove the handle cover. Then insert the spacer and reset the cover.

You can use max. 2 spacers.
(1 piece is included, others are available separately at the shop)



Key configuration

With the original MoveMaster software you can allocate all buttons individually and save the configurations easily.

When your MM is connected to the computer, the software automatically connects and displays the currently set configuration.

You can change and save individual keys or the complete configuration.

With the button 'Write config' you save the displayed configuration on your MM.

Also firmware updates can be read in at the push of a button.

Have lots of fun with your original MoveMaster!

Tom Bredinin
Die MoveMasterManufaktur
Edenstetten
94505 Bernried
Germany

www.movemaster.biz

© 2018 Tom Bredinin MoveMasterManufaktur
Errors and omissions excepted.
Subject to change without notice.

